

Instructions on Recommended Gain for Camera Setup

This document provides a detailed overview of the compatibility of various camera brands and models with DJI Mic 2, along with the recommended gain settings, aiming to offer comprehensive configuration guidance to users.

Camera Compatibility and Recommended Gain Table

Camera Brand	Camera Model	Recommended Receiver Gain	Recommended Camera Gain
Canon	EOS 5D Mark IV	9 dB	At the fourth grid
	EOS 6D MK II		
	EOS 90D		
	EOS M50 II		
	EOS R		
	EOS R5		
	EOS R6		
	EOS R7		
	EOS R6 mark II*		
Sony	A6400	0 dB	1 dB
	A6600		
	A7M3		
	A7R3		
	A7R4		
	A6700*	9 dB	1 dB
	A7C		
	A7M4		
	A7R5		
	A7S2		
	A7S3		
	FX3		
	FX30		
	ZV-E10		
	ZV-E1*		
ZV-1*			
Panasonic	G9	-9 dB	-12 dB
	GH5		
	GH5S		
	GH6		
	S5		
	S5 II		
	G85		
Nikon	Z5	9 dB	3 dB


	Z50		
	Z6		
	Z6 II		
	Z7		
	Z7 II		
	Z8*		
	Z9*		
	D850		
	D810	9 dB	2 dB
	D750		
	D780		
Fujifilm	X-H2S		
	X-S10		
	X-S20*	6 dB	-28.5 dB
	X-T3		
	X-T4		

- It is recommended to configure the above parameters when the gain setting of the DJI Mic 2 transmitter is at 0 dB.
- In the current version of firmware, camera models marked with * are not supported to be displayed on the home screen of the receiver for the time being, please pay attention to the subsequent firmware updates.

Camera Gain Configuration Interface

Canon	
-------	--

Sony

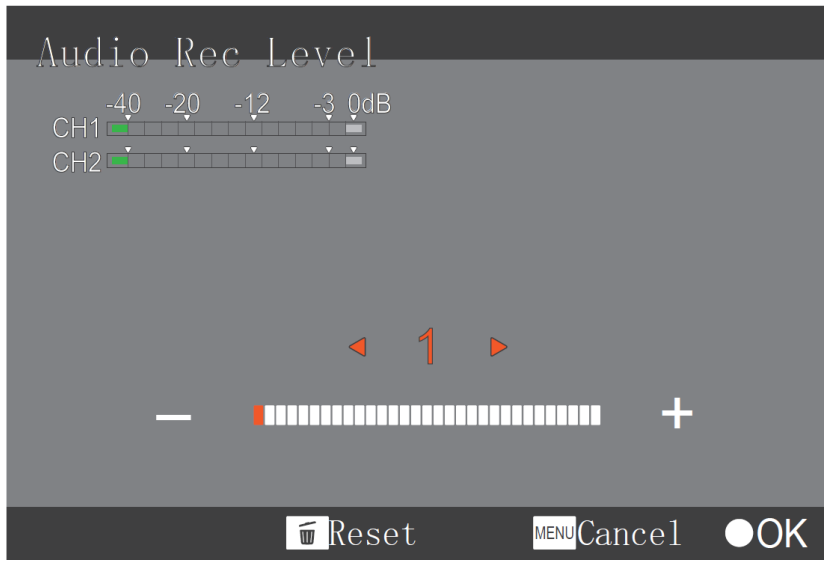

Audio Rec Level

-40 -20 -12 -3 0dB

CH1


CH2

◀ 1 ▶

— +

Reset Cancel OK

Panasonic

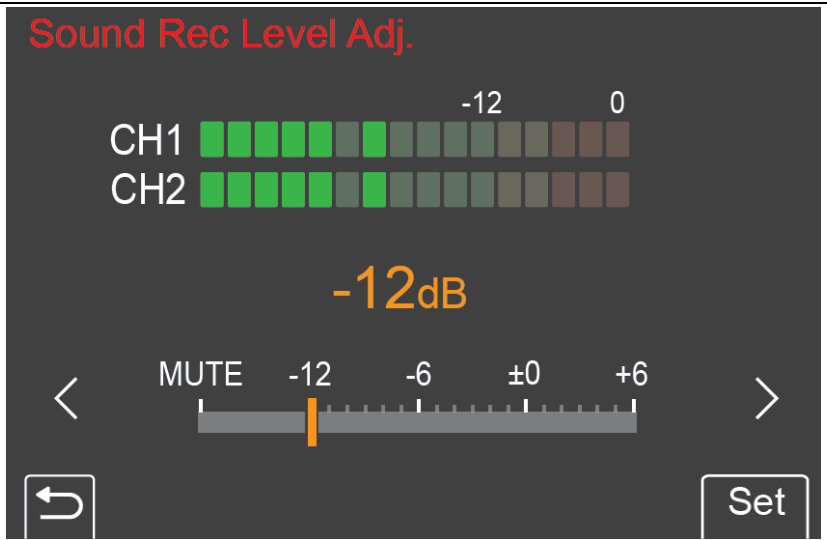

Sound Rec Level Adj.

CH1

CH2


-12 0

-12dB

< MUTE -12 -6 ±0 +6 >

Set

Nikon

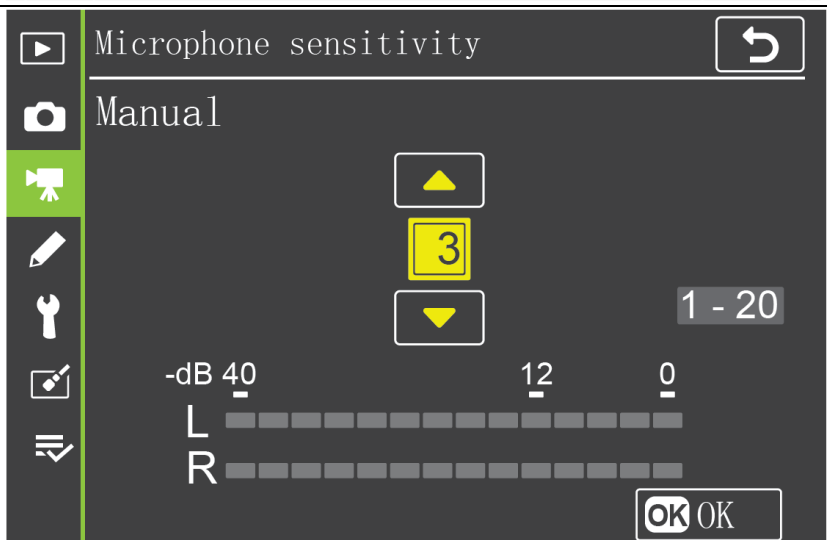

Microphone sensitivity

Manual

1 - 20

-dB 40 12 0

L

R

OK OK

EXTERNAL MIC LEVEL ADJUSTMENT

The screen displays a vertical slider on the left with a '+' sign at the top and a '-' sign at the bottom. A white box in the center of the slider shows '-28.5 dB' with upward and downward arrows. To the right, two vertical level meters labeled 'L' and 'R' are shown. The 'R' meter has a green horizontal line indicating a level of -20 dB. The scale for both meters is marked with '0' at the top and '-50 dB' at the bottom.

◀

OK SET BACK CANCEL